

Diagram of Suggested Installation Using a Conventional Water Heater and Optional Internal Circulator

** If the AQUECOIL unit is purchased without the -WP pump option, a field installed pump of appropriate size must be installed in the plumbing loop and wired correctly.**

** Local construction codes may impose additional requirements that are not shown here. Always abide by your local code.**

