

AQUECOIL HYDRONIC HEATING UNIT

MODEL HHU

AE Series

SPECIFICATION SHEET

RESIDENTIAL SPACE HEATING USING DOMESTIC HOT WATER DESCRIPTION

The AQUECOIL Hydronic Heating Unit works in conjunction with your preferred brand of Air Handler and a hot water source to provide residential space heating by extracting BTU's from the hot water and using the Air Conditioning Air Handler to distribute the heated air throughout the conditioned space. The AQUECOIL is designed to fit over the Air Handler's discharge or return in either horizontal or vertical applications. The AQUECOIL eliminates the need for a furnace or heat pump to provide space heating. Not only does the AQUECOIL offer a low cost alternative to conventional space heating equipment but, when used in conjunction with a gasfired water heater or boiler, it provides substantial heating capacity at an attractively low fuel cost.



** Shown with optional Valve Kit **

APPLICATION

The AQUECOIL Hydronic Heating Unit is mounted to the discharge or return end of the system air handler, which may be oriented in either horizontal, upflow, or downflow configuration. Power for the optional circulator pump is derived by connection to the air handler. Specific wiring requirements will change with different models of air handlers; depending on whether the particular model includes strip heat and whether it is sequenced.

FEATURED HIGHLIGHTS

- · Designed to fit with specific Air Handler sizes
- Heavy duty cabinet made with rust-proof aluminum
- · Baked enamel finish, colored to blend in
- Fully insulated with high "R" rigid foam
- Uses any hot water source with sufficient BTUH
- Heat output easily adjusted to match system requirements
- Optional return-side configuration
- Optional fused and grounded 230-volt pump circuit for easy direct connection to air handler
- Optional water lubricated, low wattage circulation pump requires no maintenance
- Optional valve kit with hand valves, bleed ports and check valves
- ARL Listed Appliance, with UL approved components

The AQUECOIL circulator pump, or boiler zone valve and pump, will start on a call for heat from the thermostat. Hot water is drawn from the domestic water heater or boiler and supplied to the AQUECOIL. Once the coil is heated and the blower delay is satisfied, the Air Handler will distribute the heated air to the conditioned space. When the thermostat is satisfied, both the AQUECOIL circulator, or boiler zone valve and pump, and the Air Handler blower will shut down.

SPECIFICATIONS AND INFORMATION

These Specifications are Subject to Change without Notice

CIRCULATOR PUMP

AQUECOIL Hydronic Heating Units may contain a low wattage, wet rotor, in-line, single stage circulator. All standard pump models use Grundfos UPS15-42B multispeed circulators. The water cooled pumps are rated at 95 watts, 230 volts, and 0.4 amps. They are designed for working pressures up to 145 psi and fluid temperatures up to 220°F. The pump volute is bronze and the bearings are ceramic.

HEAT EXCHANGER

AQUECOIL Hydronic Heating Units contain a high performance, 2 row fin/tube water-to-air heat exchanger. Lanced aluminum fins provide sufficient heat exchange fin surface to avoid using a 3 row coil, with its inherently higher static pressure drop. All water bearing surfaces are copper.

CONTROLS

AQUECOIL Hydronic Heating Units are designed to utilize the Air Handler controls, including the system thermostat. Interconnection with the Air Handler's operating controls may

vary, depending on the model and back-up heat configuration. Consult the wiring diagram in the Installation Instructions for specific interconnection details. Air Handlers without strip heat will require a 24V heating fan relav.

MOUNTING/LOCATION

AQUECOIL Units are designed to mount over the discharge (return with -R option) of your preferred Air Handler. Since the AQUECOIL interconnects the Air Handler and the Hot Water Source, some consideration must be given to the distance between these system components. Models AE-1 and AE-2 can accommodate approximately 200 equivalent feet of 3/4" water pipe round trip. To get the full effect from model AE-3, the pipe loop cannot exceed 25 equivalent feet of 3/4" water pipe at 9 gpm with the optional circulator. Longer runs will require larger pipe size in the plumbing loop; or a reduction in flow rate thereby causing a reduction in heat output.

NOTE: Many installations may require swing check valves to prevent cooling season thermosyphoning.

NOMINAL PRODUCT PERFORM	MANCE
-------------------------	-------

						140°F E.W.T.			180°F E.W.T.	
MODEL	Air Flow (scfm)	Static ("wg) Base / -R	Water Flow (gpm)	Pump Head (ft)	Temp. Fall Water (°F)	Temp. Rise Air (°F)	Heat BTUH	Temp. Fall Water (°F)	Temp. Rise Air (°F)	Heat BTUH
AE-1	600	.11 / .10	4	2.3	13	40	26,000	21	64	41,500
	800	.17 / .15	4	2.3	15	35	30,000	25	55	47,500
AE-2	1000	.15 / .13	4	3.1	19	35	38,000	31	56	60,500
	1200	.20 / .17	6	6.4	15	35	44,500	24	55	71,000
	1400	.25 / .22	6	6.4	16	32	48,000	26	50	76,000
AE-3	1500	.20 / .18	6	3.0	18	32	52,500	29	52	84,000
	1600	.22 / .19	9	6.2	13	34	58,000	21	53	92,500
	1800	.27 / .23	9	6.2	14	32	61,500	22	50	97,500

^{**} Chart shows sample data points, not requirements *

PRODUCT SELECTION GUIDE

AQUECOIL SELECTOR BY MODEL

(AND AIR HANDLER PERFORMANCE)

Air Handler Model BCS2M18 / RBCS2M18	Low / High (cfm @ .40 "wg) 626 / 800	Use Aquecoil Model AE-1
BCS2M24 / RBCS2M24	786 / 817	AE-1
BCS2M30 / RBCS2M30	959 / 1150	AE-2
BSC2M36 / RBCS2M36	1186 / 1290	AE-2
BCS2M42 / RBCS2M42	1516 / 1629	AE-3
BCS2M48 / RCBS2M48	1599 / 1660	AE-3
BCS2M60 / RBCS2M60	1774 / 1845	AE-3


AQUECOIL SELECTOR BY SIZE

(USE THIS CHART FOR ALL UNLISTED MODELS)

Model	Unit Dimensions	Discharge Opening
AE-1	18 1/2" X 22" X 8"	16 1/2" X 17"
AE-2	21 1/4" X 22" X 8"	19 1/4" X 17"
AF-3	21 1/4" X 26" X 8"	19 1/4" X 21"

Circulator Performance

GRUNDFOS Pumps Corporation UPS 15-42 B7 230V 60Hz

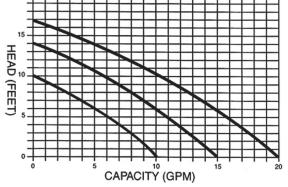

OPTIONAL CONFIGURATIONS

-W/P	With Standard Pump
-W/HHP	With High Head Pump
-W/V	With Standard Valve Kit
-R	Configured for Return Side Mounting (Open Top, No Baffle, Lower Static)

WARRANTY: All AQUECOIL Hydronic Heating Units offer a limited 3 year parts warranty.

REV 03/2008

^{** 70°}F Entering Air is used for all calculations **